


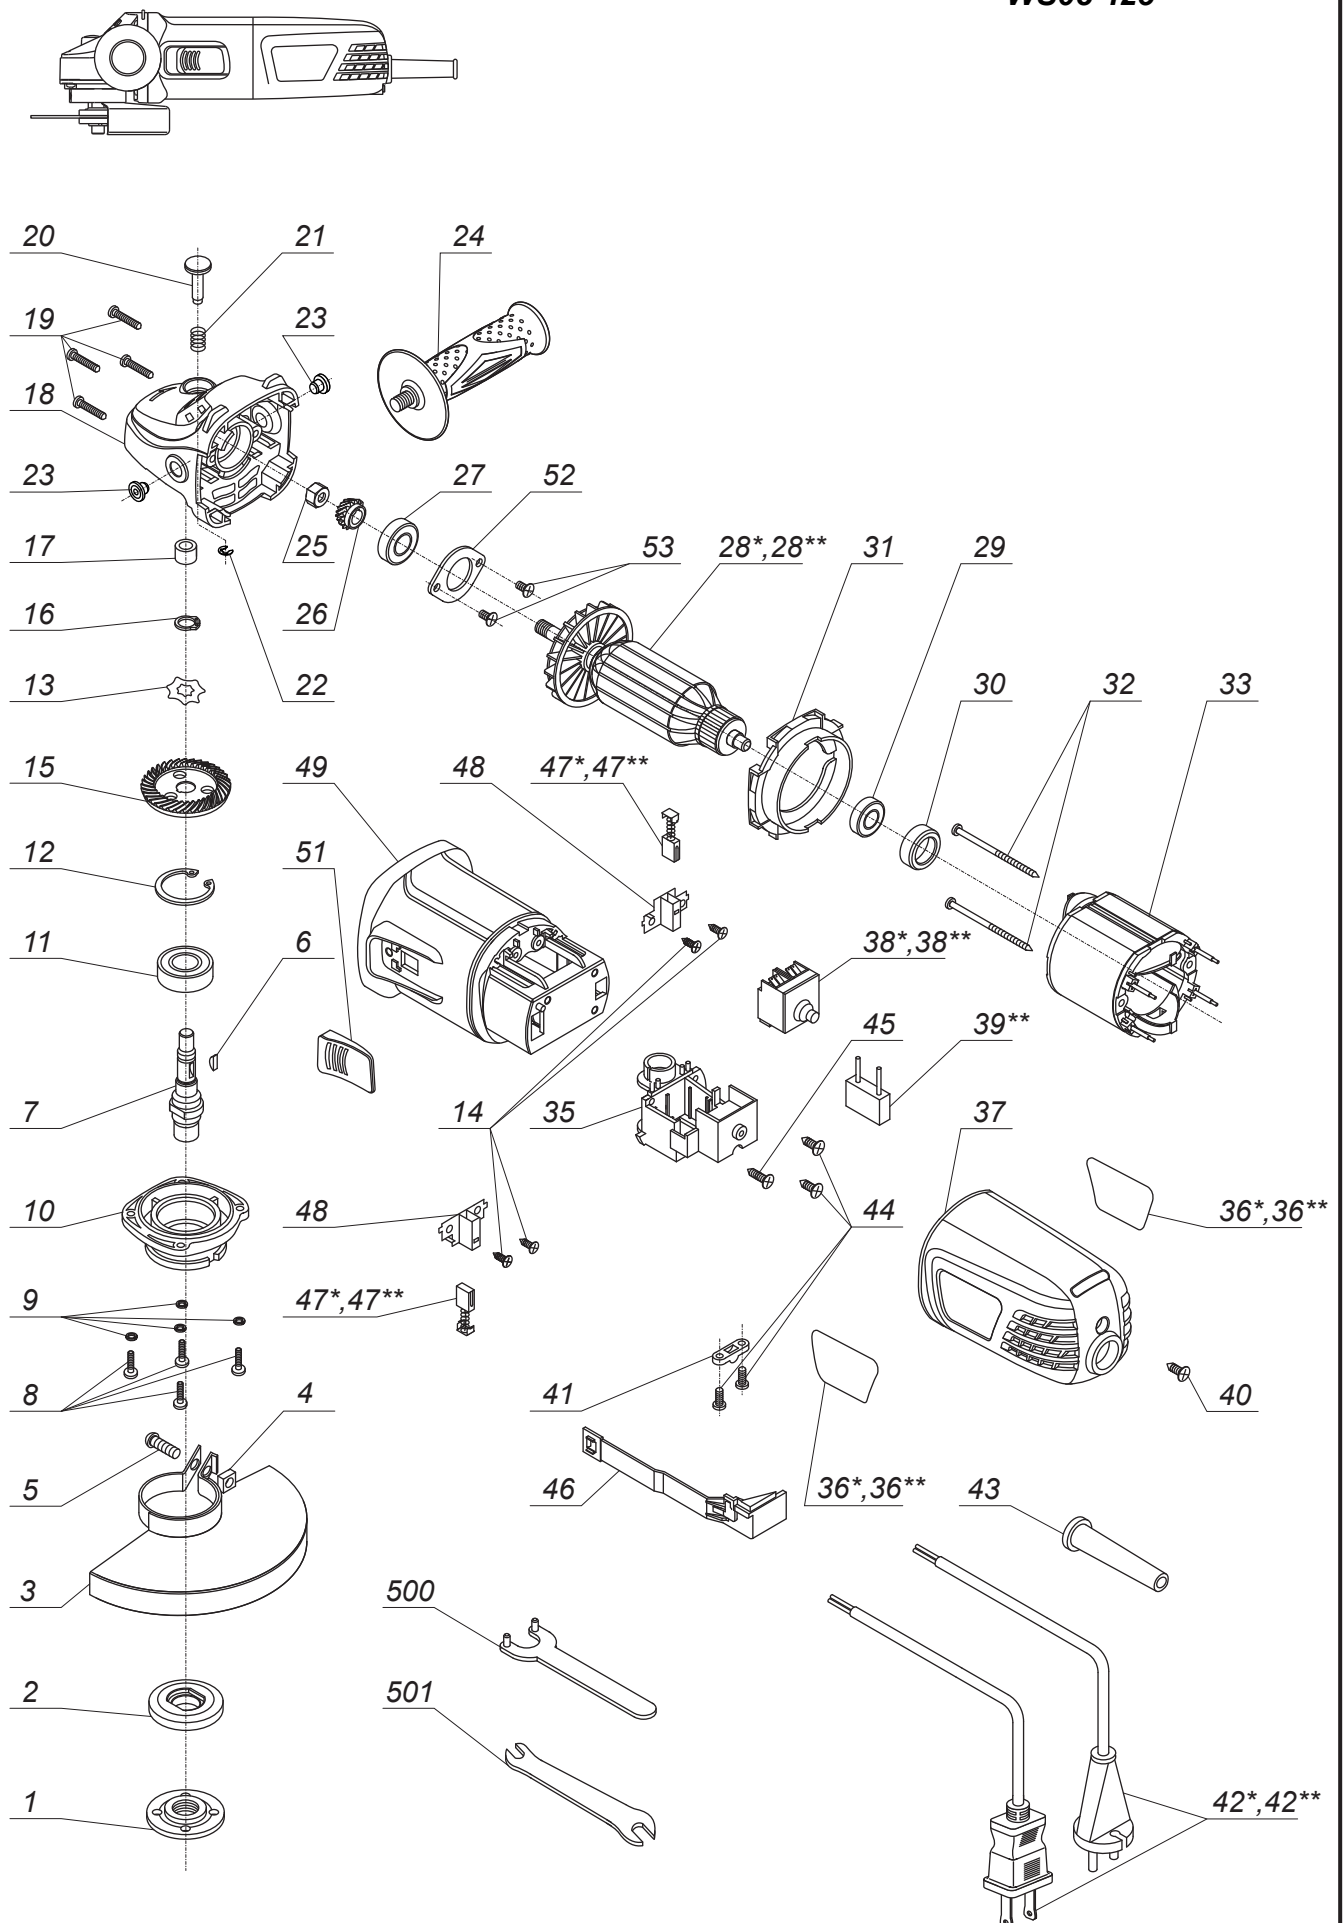

* - 127 V
** - 230 V

PRICE LIST OF SPARE PARTS

Pos.	Part Number	Description (Q-ty)	Description National Language (Q-ty)	Price, USD
1	M-090	Outside flange		
2	M-091	Inner flange		
3#	P-005	Wheel guard Ø125		
4	S-168	Square nut M5		
5	S-040	Screw M5x20		
6	R-014	Key 3x3.7x10		
7	K-056	Spindle		
8	S-032	Screw M4x14 (4)		
9	S-023	Spring washer Ø4 (4)		
10	G-040	Gear housing cover		
11	O-014	Ball bearing 6201.RS		
12	S-108	Circlip for hole Ø32		
13	R-072	Wave spring washer Ø10xØ15		
14	S-072	Screw ST4x10 (4)		
15	F-036	Big gear		
16	S-094	Circlip for shaft Ø10		
17	O-068	Bronze bush Ø12xØ8x10		
18	G-031	Gear housing		
19	S-078	Screw ST4x22 (4)		
20	L-041	Brake pin		
21	R-073	Brake spring		
22	S-175	"C" ring 4.7		
23	S-105	Rubber plunge (2)		
24	Q-040	Side handle		
25	S-177	Lock nut M8x1		
26	F-043	Small gear		
27	O-008	Ball bearing 6000.RS		
28*	1A-027	Armature 127V		
28**	A-027	Armature 230V		
29	O-002	Ball bearing 608.RS		
30	M-007	Bearing bush Ø25xØ22x9		
31	I-027	Guide wind circle		
32	S-087	Screw ST4x65 (2)		
33*	1B-026	Stator 127V		
33**	B-026	Stator 230V		
35	M-099	Switch seat		
36*	1T-058	Brand label (2) 127 V (WS08-125)		
36**	T-058	Brand label (2) 230 V (WS08-125)		
37	H-075	Back handle		
38*	1C-003	Switch 127V		
38**	C-003	Switch 230V		
39**	E-005	Condenser 0.22µF 230V		
40	S-074	Screw ST4x14 (4)		
41	M-002	Cord clip		
42*	1E-002	Cord 127V		
42**	E-002	Cord 230V		
43	M-003	Rubber sleeve		
44	S-073	Screw ST4x12 (4)		
45	S-054	Sunk screw ST4x14		
46	N-112	Control rod		
47*	1D-011	Carbon brush (2) 127V		
47**	D-011	Carbon brush (2) 230V		
48	J-020	Brush holder (2)		
49	H-058	Housing		

51	I-033	Push button		
52	M-096	Bearing cover № 2		
53	S-093	Sunk screw M5x10 (2)		
500	Q-042	Spanner		